

 
 
 
 
 
 
 
 
 
 
 
 


**TECHNICAL DATA**

**FRAME STYLE  
SPRAY NOZZLE  
WATER DISTRIBUTION PATTERNS**

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058

Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com

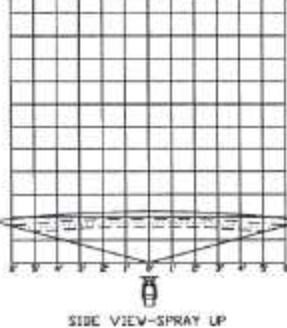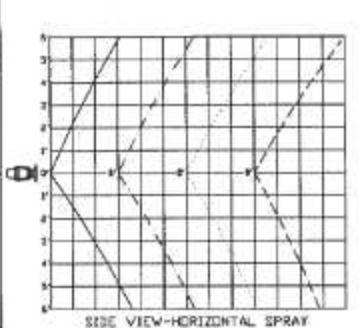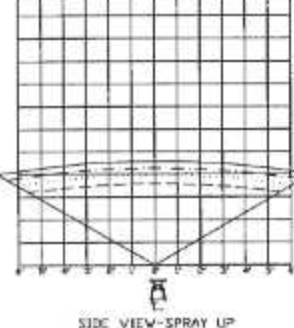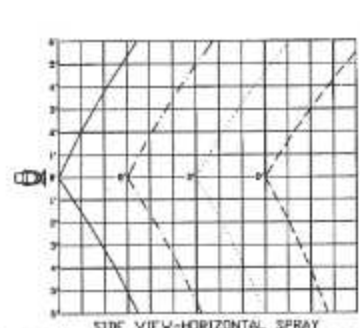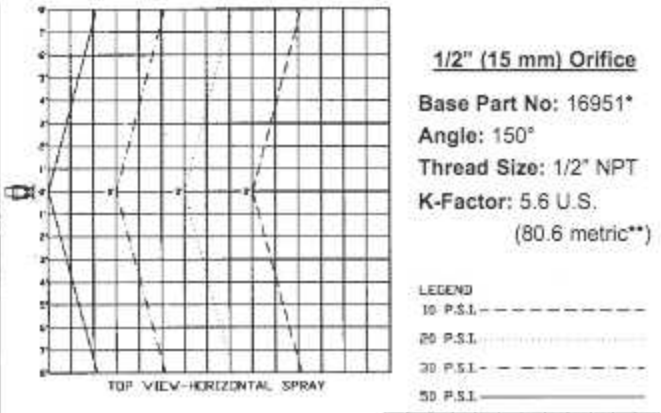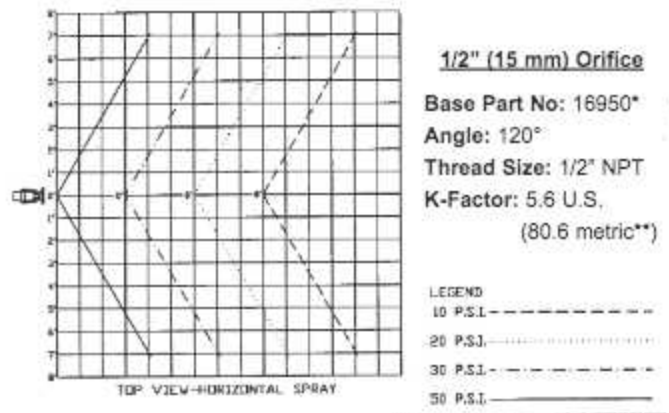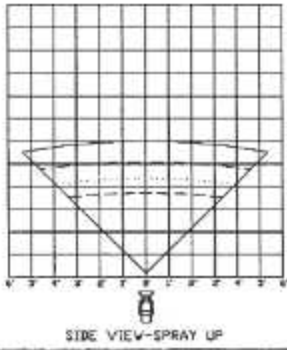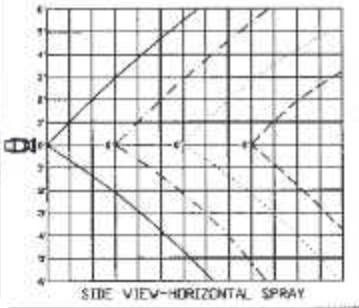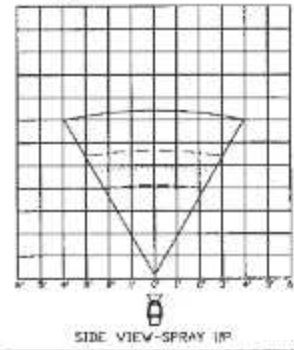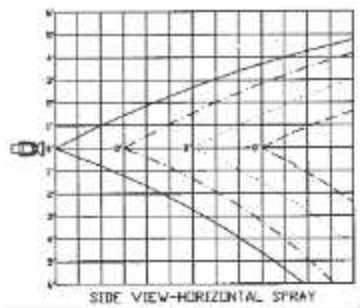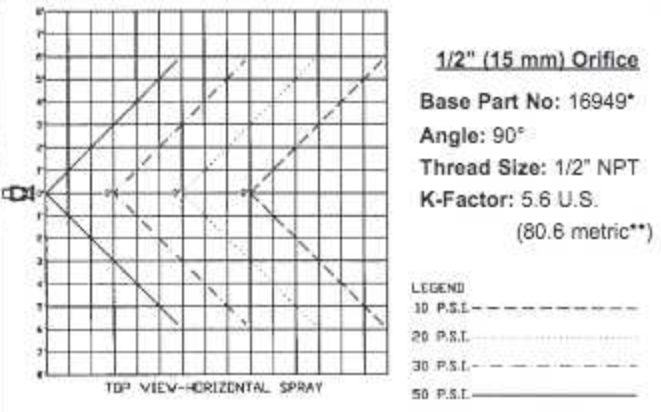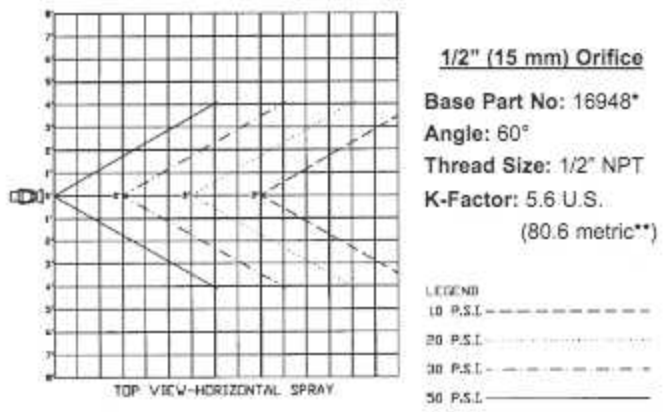

Scale: Each square equals one square foot.

\* Part number shown is the base part number. For complete part number, refer to current Viking price list schedule.

\*\*Metric K-factor measurement shown is when pressure is measured in Bar. When pressure is measured in kPa, divide the metric K-factor shown by 10.0.

 
 
 
 
 
 
 
 


**TECHNICAL DATA**

**FRAME STYLE  
SPRAY NOZZLE  
WATER DISTRIBUTION PATTERNS**

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058

Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com

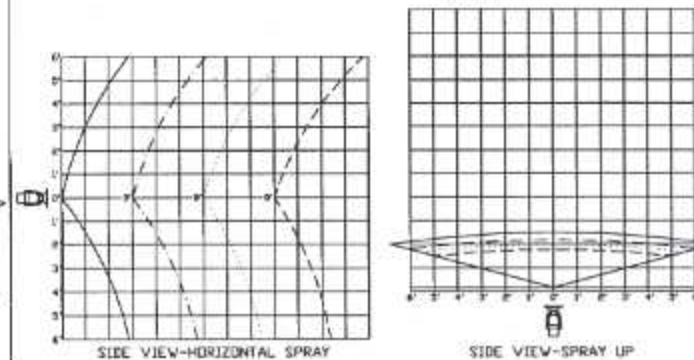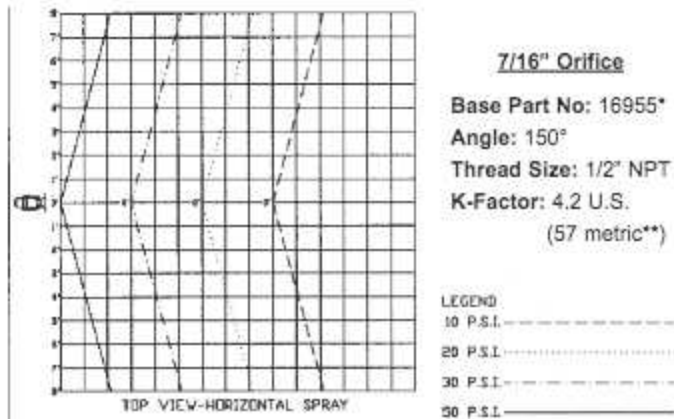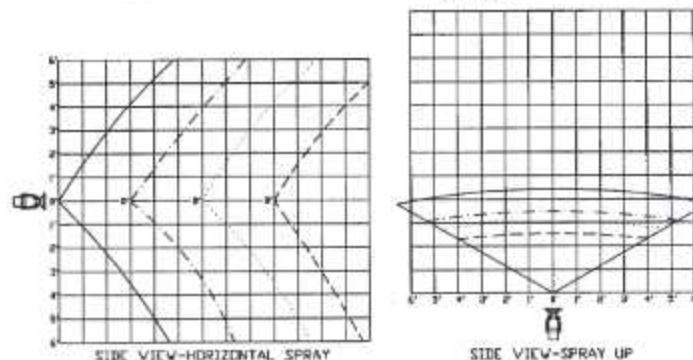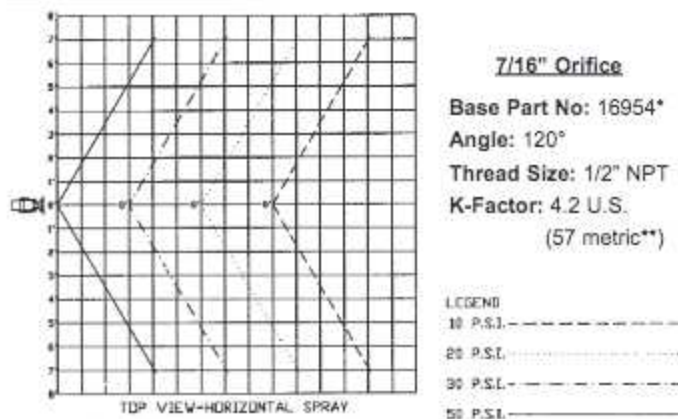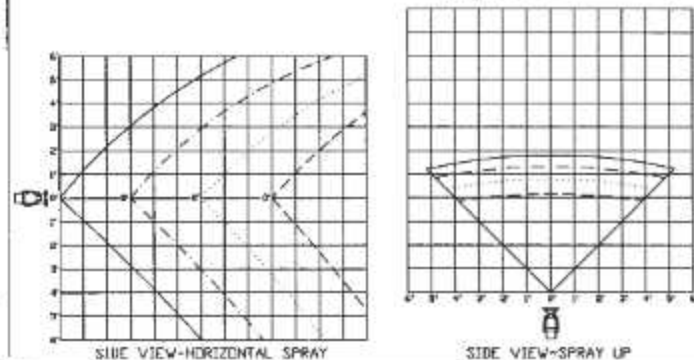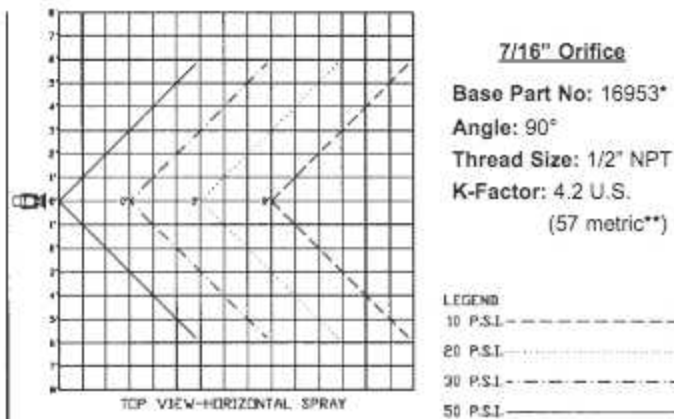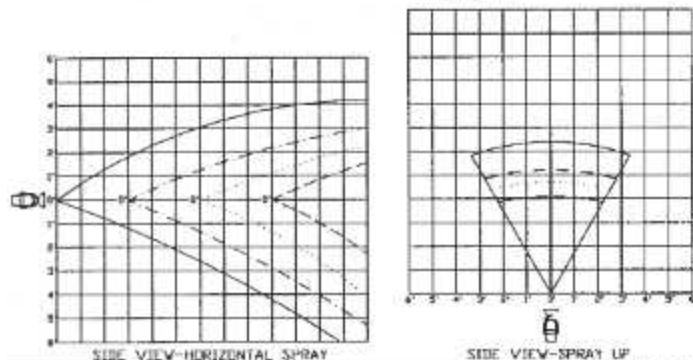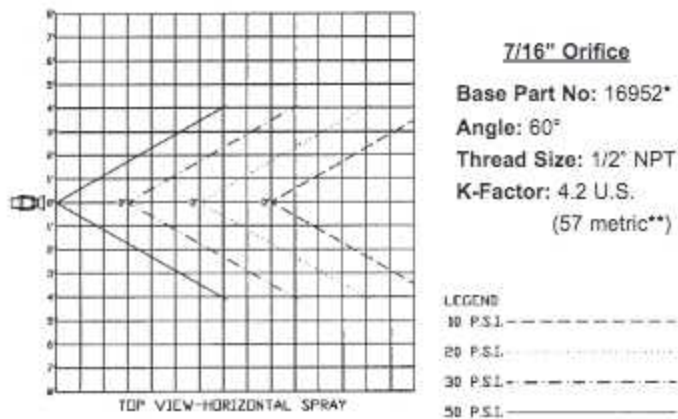

Scale: Each square equals one square foot.

\* Part number shown is the base part number. For complete part number, refer to current Viking price list schedule.

\*\*Metric K-factor measurement shown is when pressure is measured in Bar. When pressure is measured in kPa, divide the metric K-factor shown by 10.0.



 
 
 
 
 
 
 
 


**TECHNICAL DATA**

**FRAME STYLE  
SPRAY NOZZLE  
WATER DISTRIBUTION PATTERNS**

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058

Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com

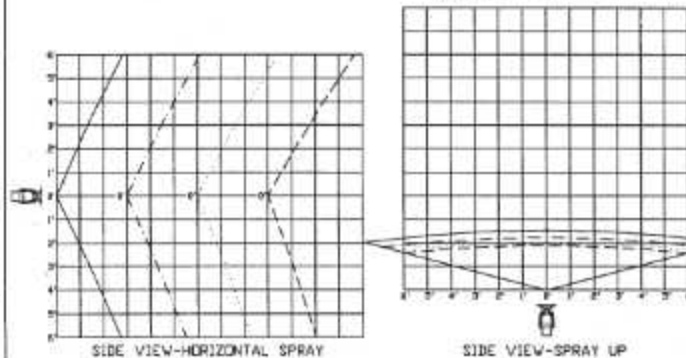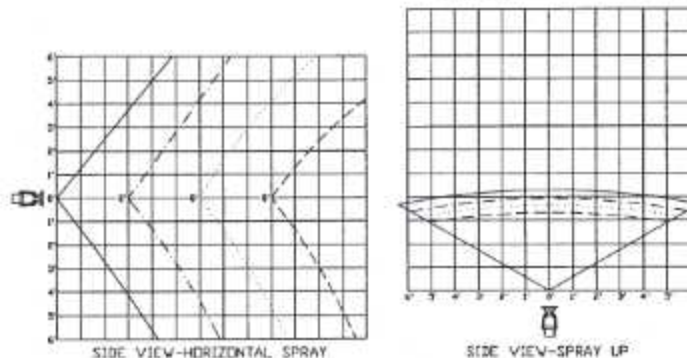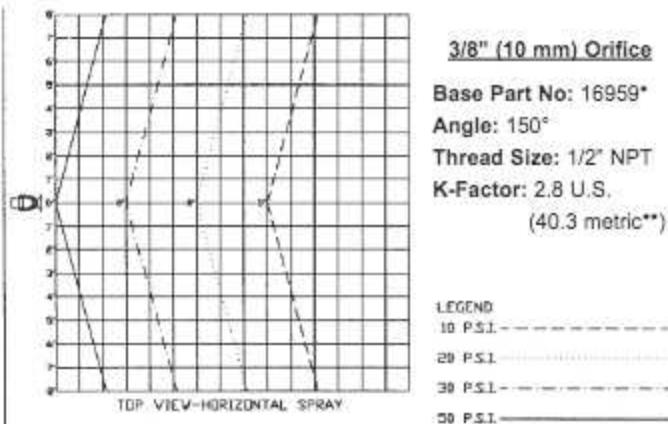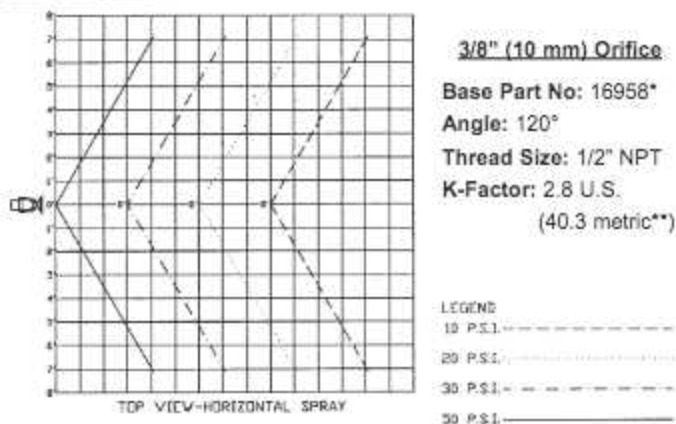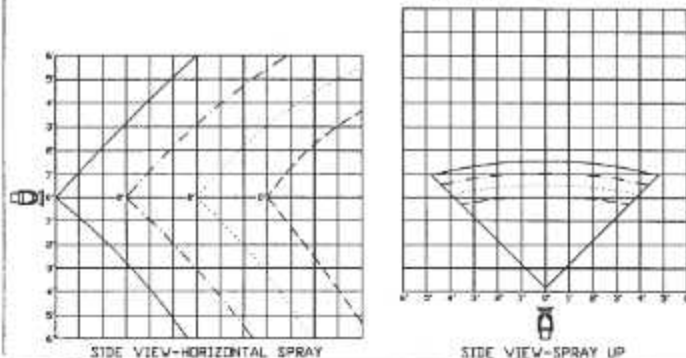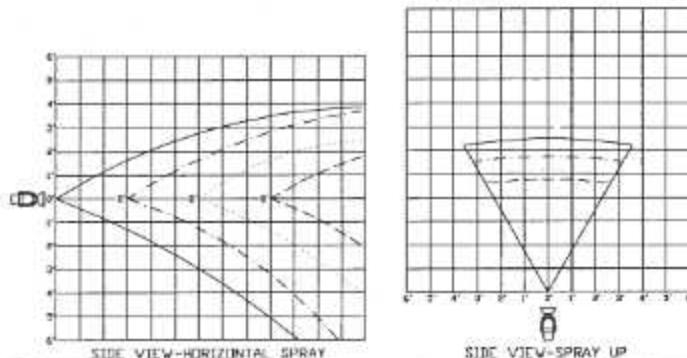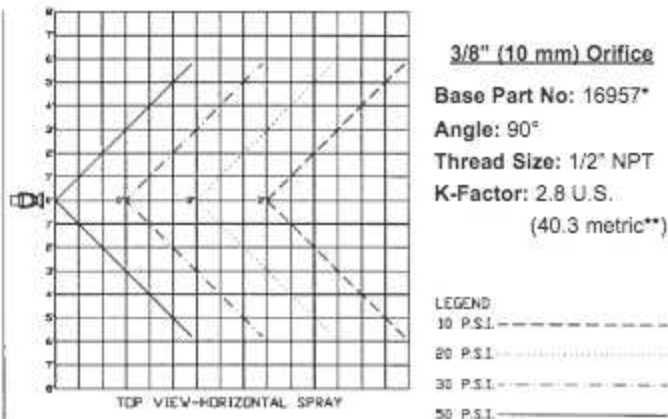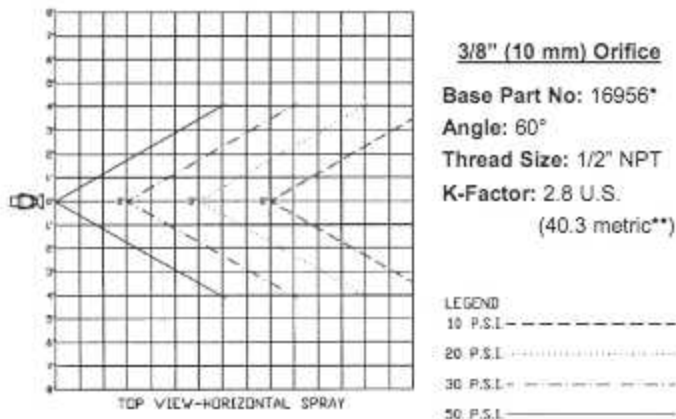

Scale: Each square equals one square foot.

\* Part number shown is the base part number. For complete part number, refer to current Viking price list schedule.

\*\*Metric K-factor measurement shown is when pressure is measured in Bar. When pressure is measured in kPa, divide the metric K-factor shown by 10.0.

 
 
 
 
 
 
 
 


**TECHNICAL DATA**

**FRAME STYLE  
SPRAY NOZZLE  
WATER DISTRIBUTION PATTERNS**

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058

Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com

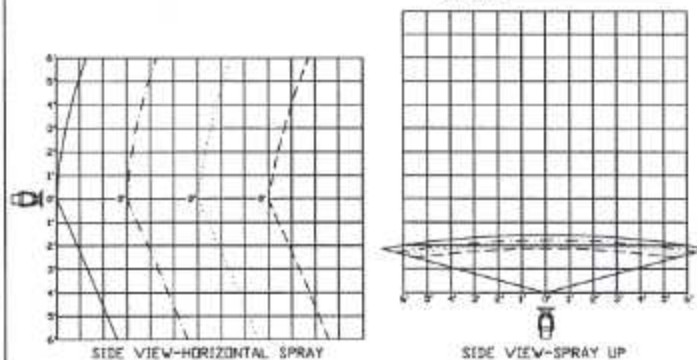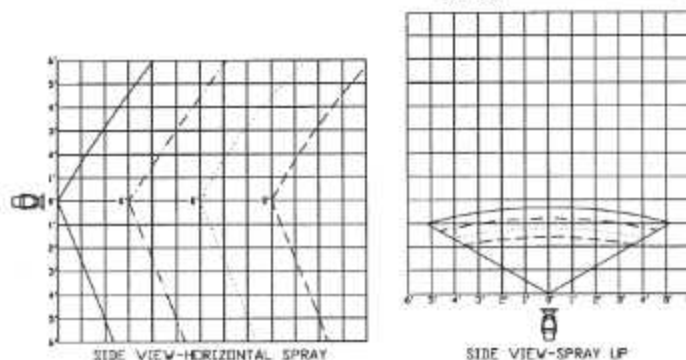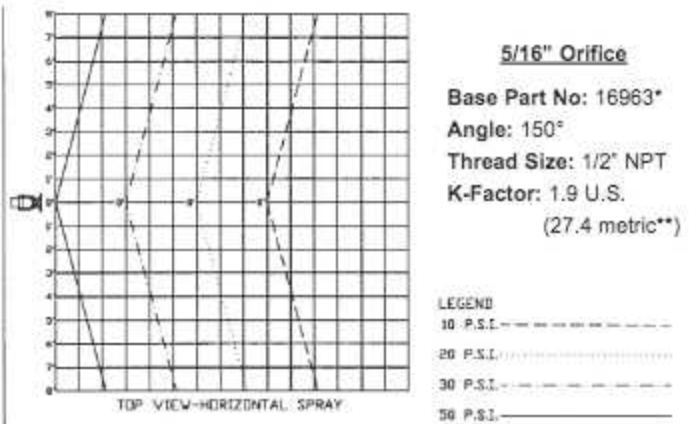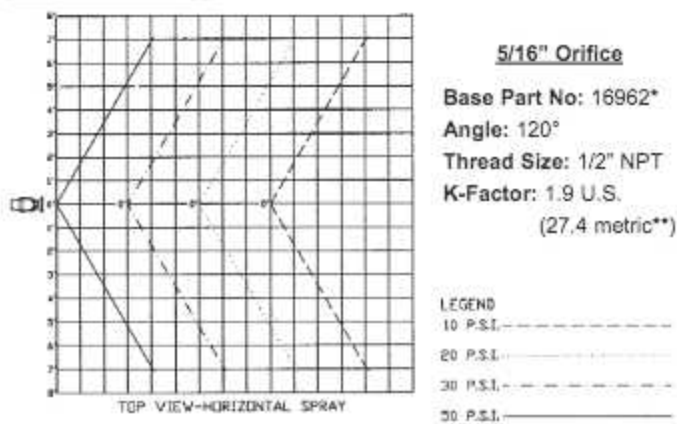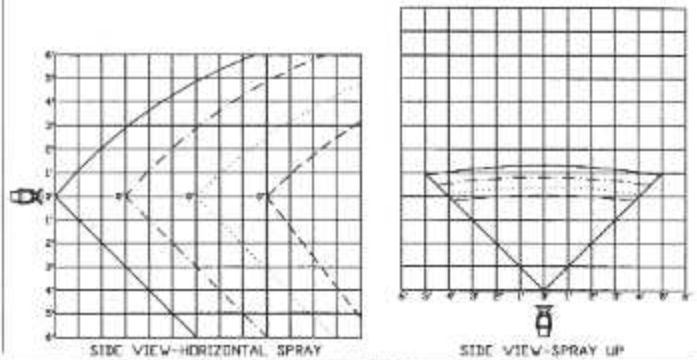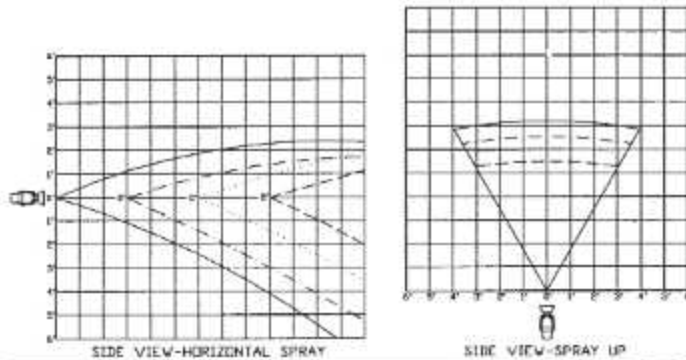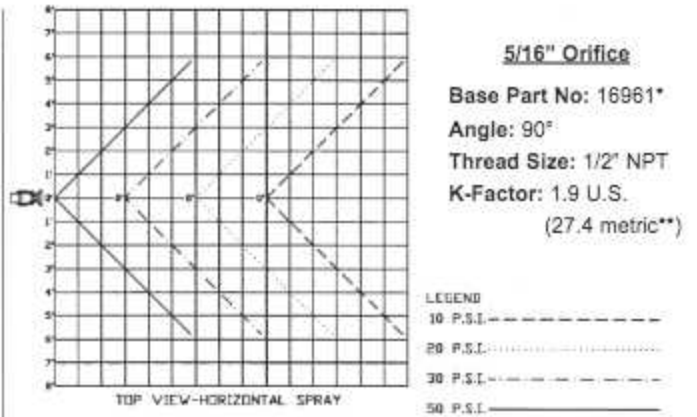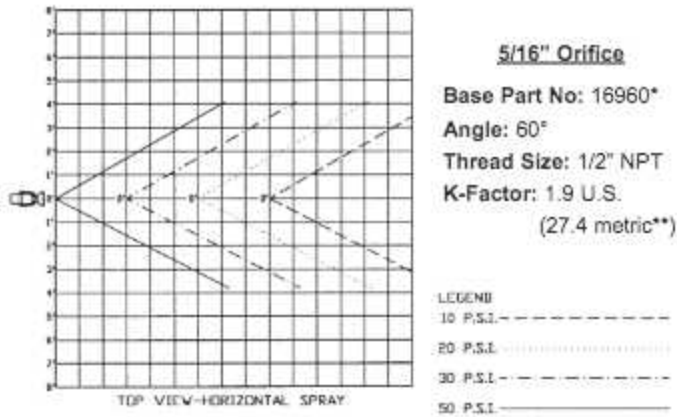

Scale: Each square equals one square foot.

\* Part number shown is the base part number. For complete part number, refer to current Viking price list schedule.

\*\*Metric K-factor measurement shown is when pressure is measured in Bar. When pressure is measured in kPa, divide the metric K-factor shown by 10.0.



 
 
 
 
 
 
 
 


**TECHNICAL DATA**

**FRAME STYLE  
SPRAY NOZZLE  
WATER DISTRIBUTION PATTERNS**

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058

Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com

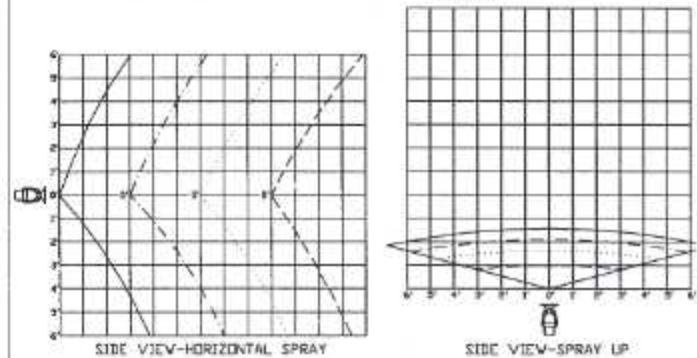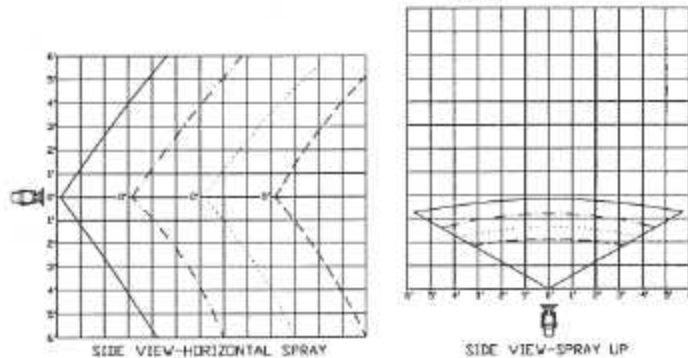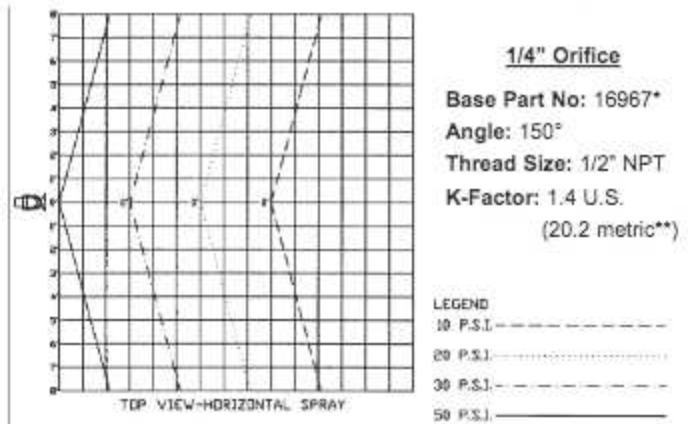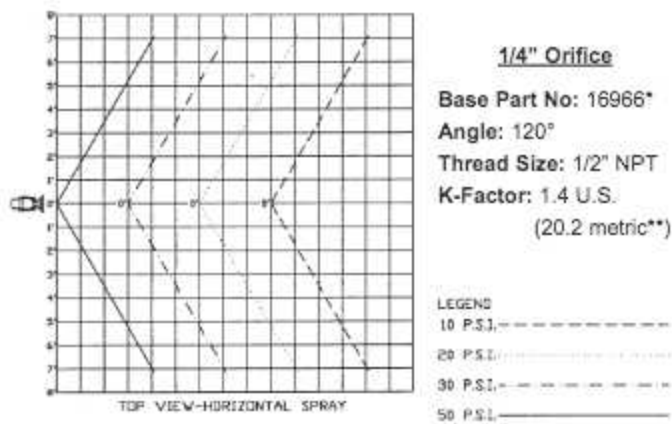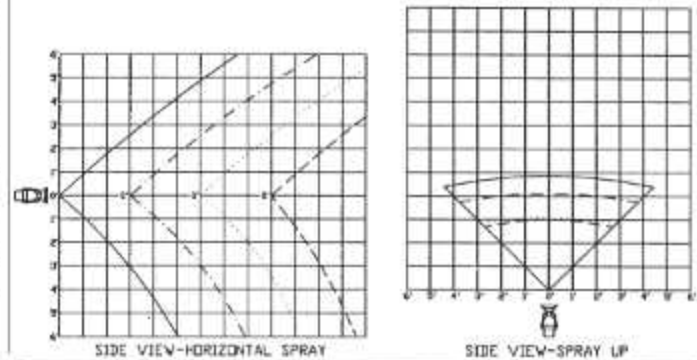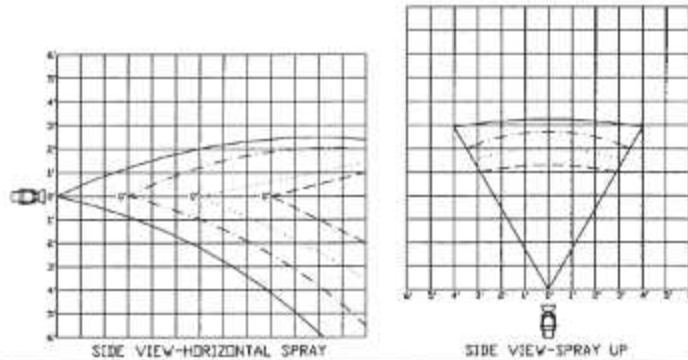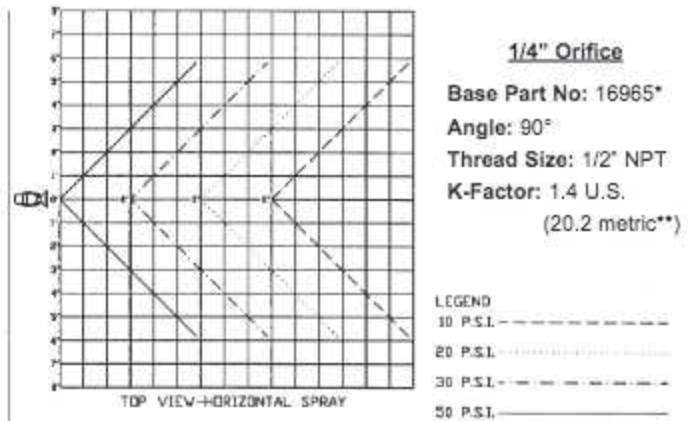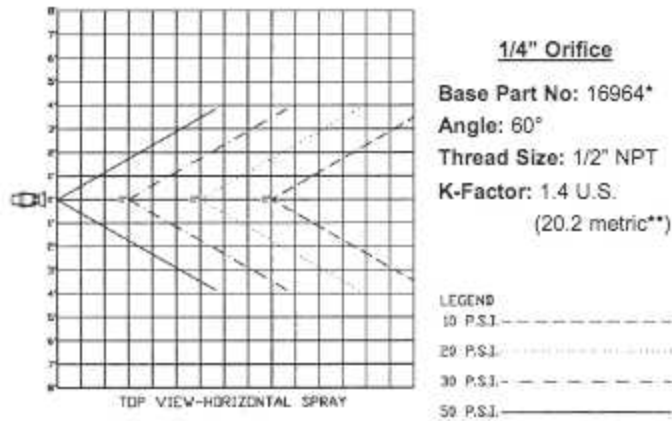

Scale: Each square equals one square foot.

\* Part number shown is the base part number. For complete part number, refer to current Viking price list schedule.

\*\*Metric K-factor measurement shown is when pressure is measured in Bar. When pressure is measured in kPa, divide the metric K-factor shown by 10.0.

**THIS PAGE  
INTENTIONALLY  
LEFT BLANK**