

LOAD WEIGHT INDICATION FOR FORKLIFT

Accessories:

Zone 3

- Light & Alarm (Option)
- We have output for Lamp and Alarm

Zone 2

- Load Cell and modification Hydraulic Hose
- Install Load Cell type Pressure Transducer with modification Hydraulic Hose for adjust pressure for reading and calibration load in Controller.

Zone 1

- Display and Controller



CONTACT

+66 2978 1175 +668 1859 0469



SALEROBWAY

LOAD WEIGHT INDICATION FOR FORKLIFT



CONTACT



+66 2978 1175



+668 1859 0469



SALEROBWAY